




1
Broken slate needs to be replaced.

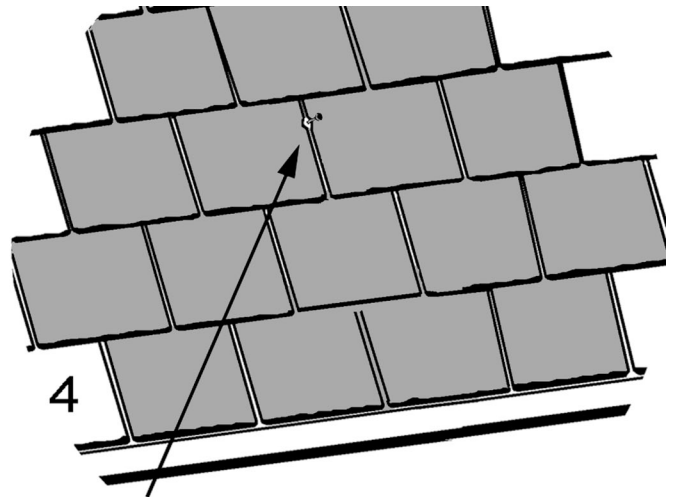


4
Replacement slate is slid into place and fastened with a nail in the slot.

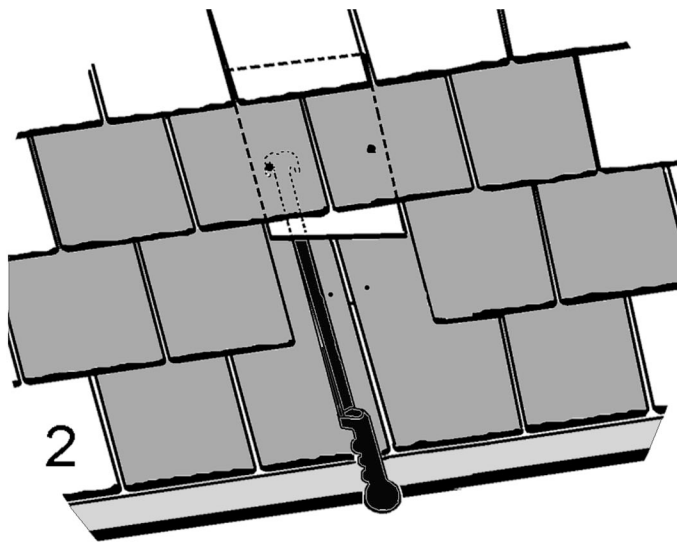

2
Slate ripper hooks slate nails and pulls them out, removing slate.

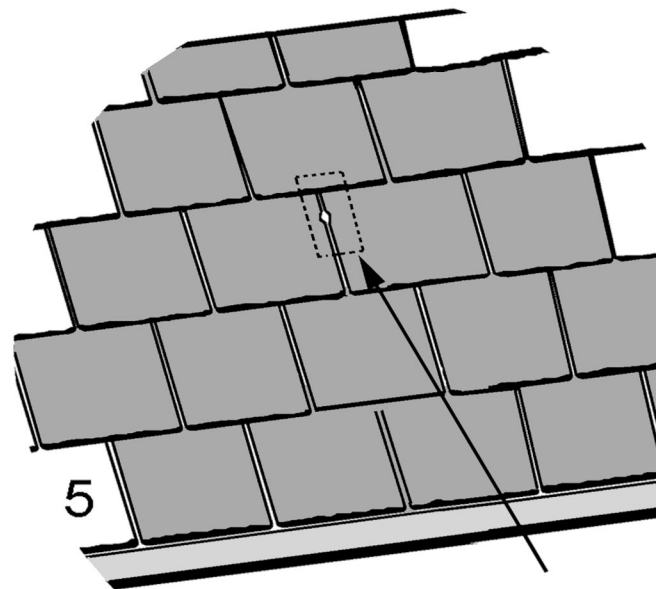


5
The roofing nail is tapped down and a bib flashing is slid under the slate but over the nail head.

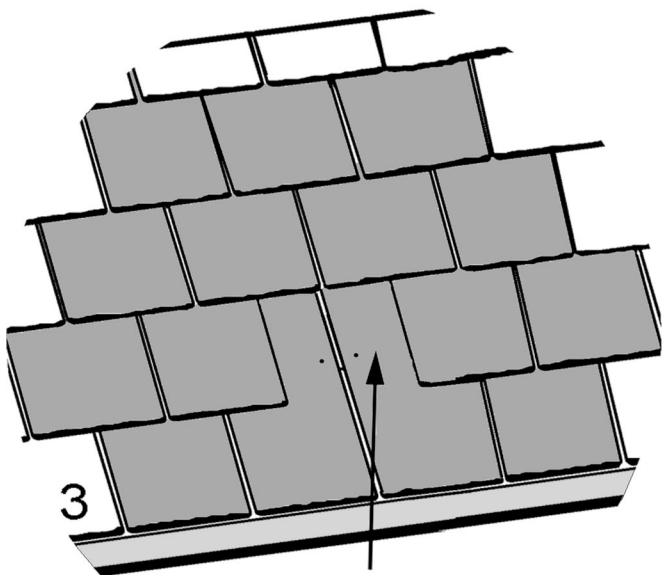


3
The slate has been removed and the roof is now ready for a replacement.

SLATE HOOK REPAIR


Use a stainless steel or copper slate hook instead of a nail and bib. Pound it in, slide the replacement slate over it and hook it into place.

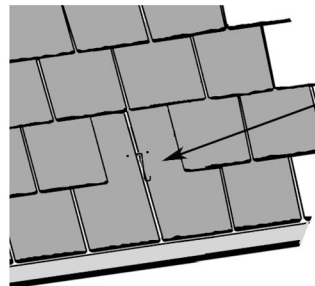

DON'T STRAP REPAIR

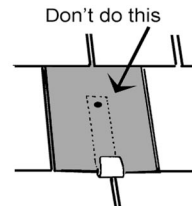

Don't do this

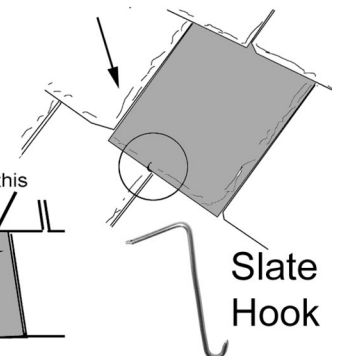

Slate Hook